

45 Degree - Lindab pipe measure guide


Lindab provides a 45 Degree elbow for tight offsets.

To offset two vertical pipes, the joining pipe is calculated as;

(Pipe offset distance minus 2-5/8") multiplied by 1.414

Vertical distance of offset is the offset measure plus 6-3/8"

The chart below shows pipe lengths and wall distance for offset measures from 4 to 60 inches.

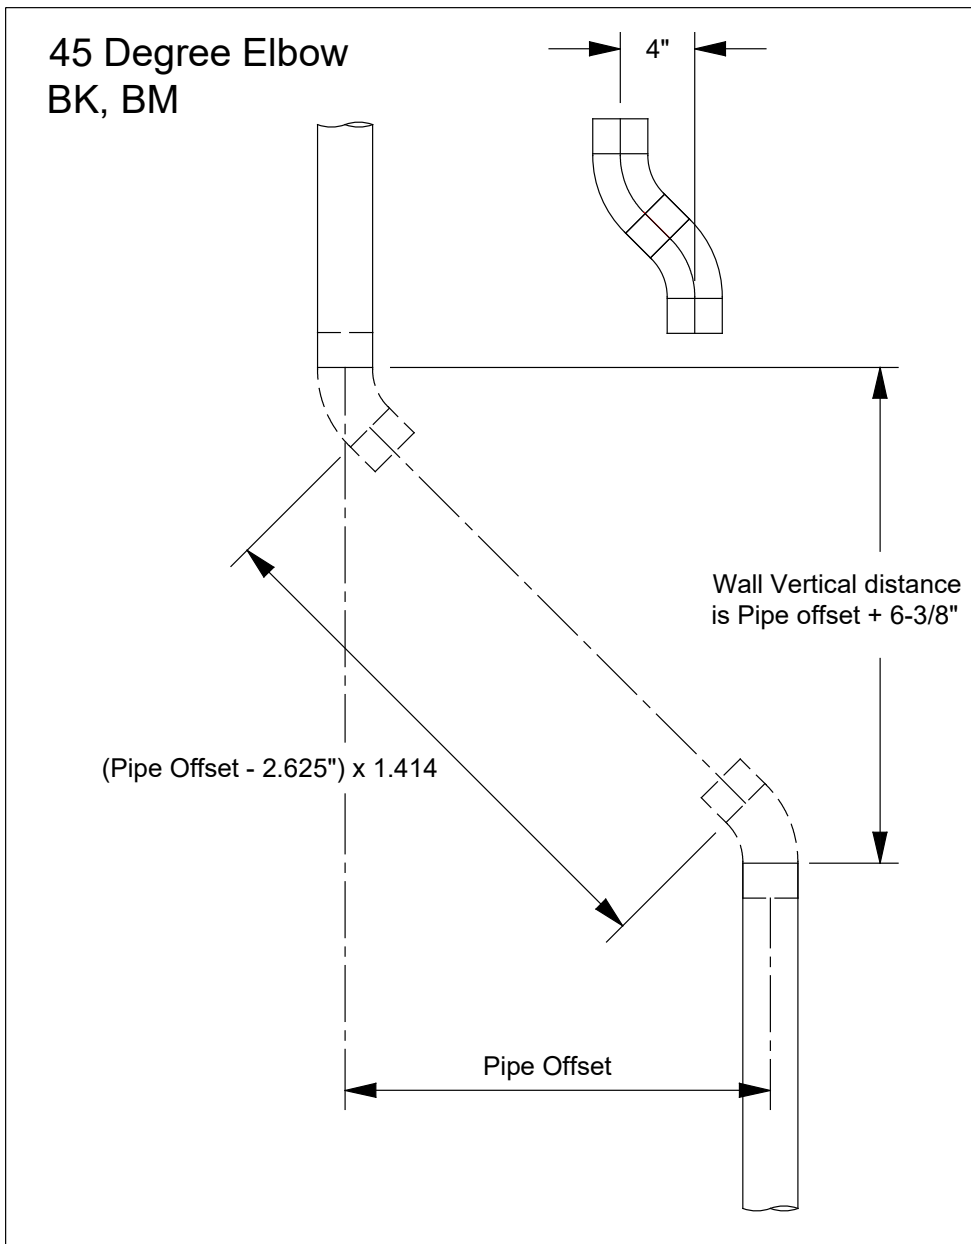

Offset	Pipe	Wall
4	1-7/8	10-3/8
6	4-3/4	12-3/8
8	7-1/2	14-3/8
10	10-3/8	16-3/8
12	13-1/4	18-3/8
14	16	20-3/8
16	18-7/8	22-3/8
18	21-3/4	24-3/8
20	24-1/2	26-3/8
22	27-3/8	28-3/8
24	30-1/4	30-3/8
26	33	32-3/8
28	35-7/8	34-3/8
30	38-5/8	36-3/8
32	41-1/2	38-3/8
34	44-1/4	40-3/8
36	47-1/8	42-3/8
38	50	44-3/8
40	52-3/4	46-3/8
42	55-5/8	48-3/8
44	58-1/2	50-3/8
46	61-1/4	52-3/8
48	64-1/8	54-3/8
50	67	56-3/8
52	69-3/4	58-3/8
54	72-5/8	60-3/8
56	75-3/8	62-3/8
58	78-1/4	64-3/8
60	81-1/8	66-3/8